


FPX-ALL Fireplace Dimensions

Layout & Planning Guide

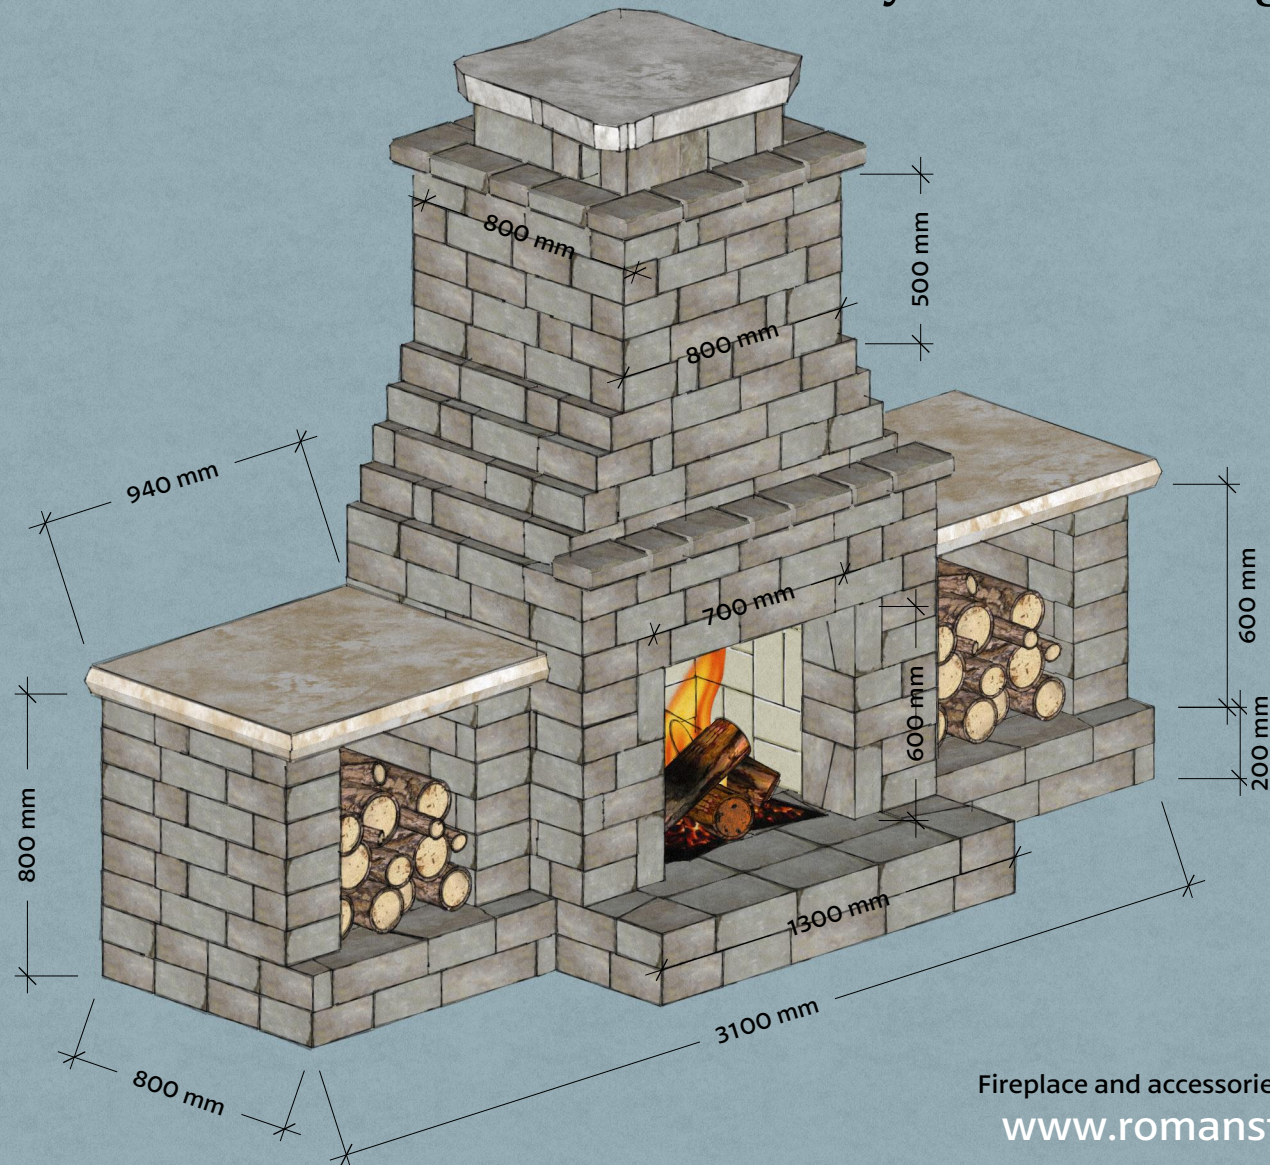


Fireplace and accessories not included.
www.romanstone.com

FPO-5228

Fremont Fireplace

All sizes in this document are approximate.

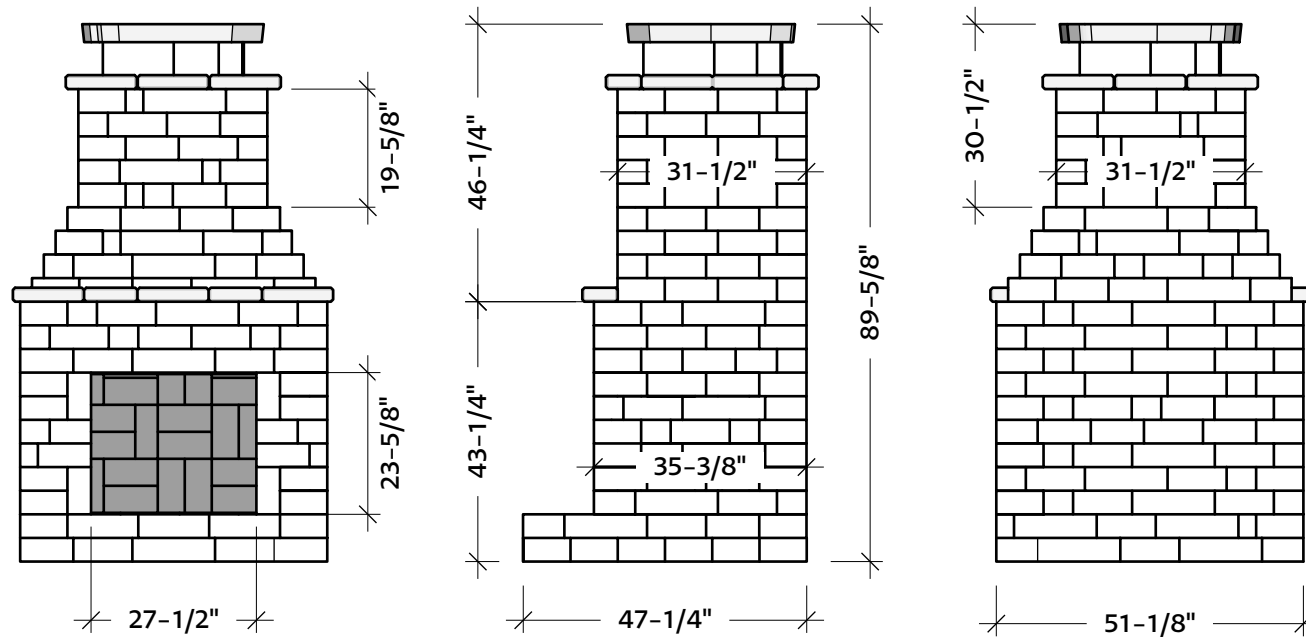


These are theoretical dimensions of a perfect build to help you plan your project.
If you have any questions, please visit:
www.romanstone.com

BUILD WITH ROMAN™

Fremont & Princeton

Footprint Dimensions with and without Classic Boxes

All sizes in this document are approximate.

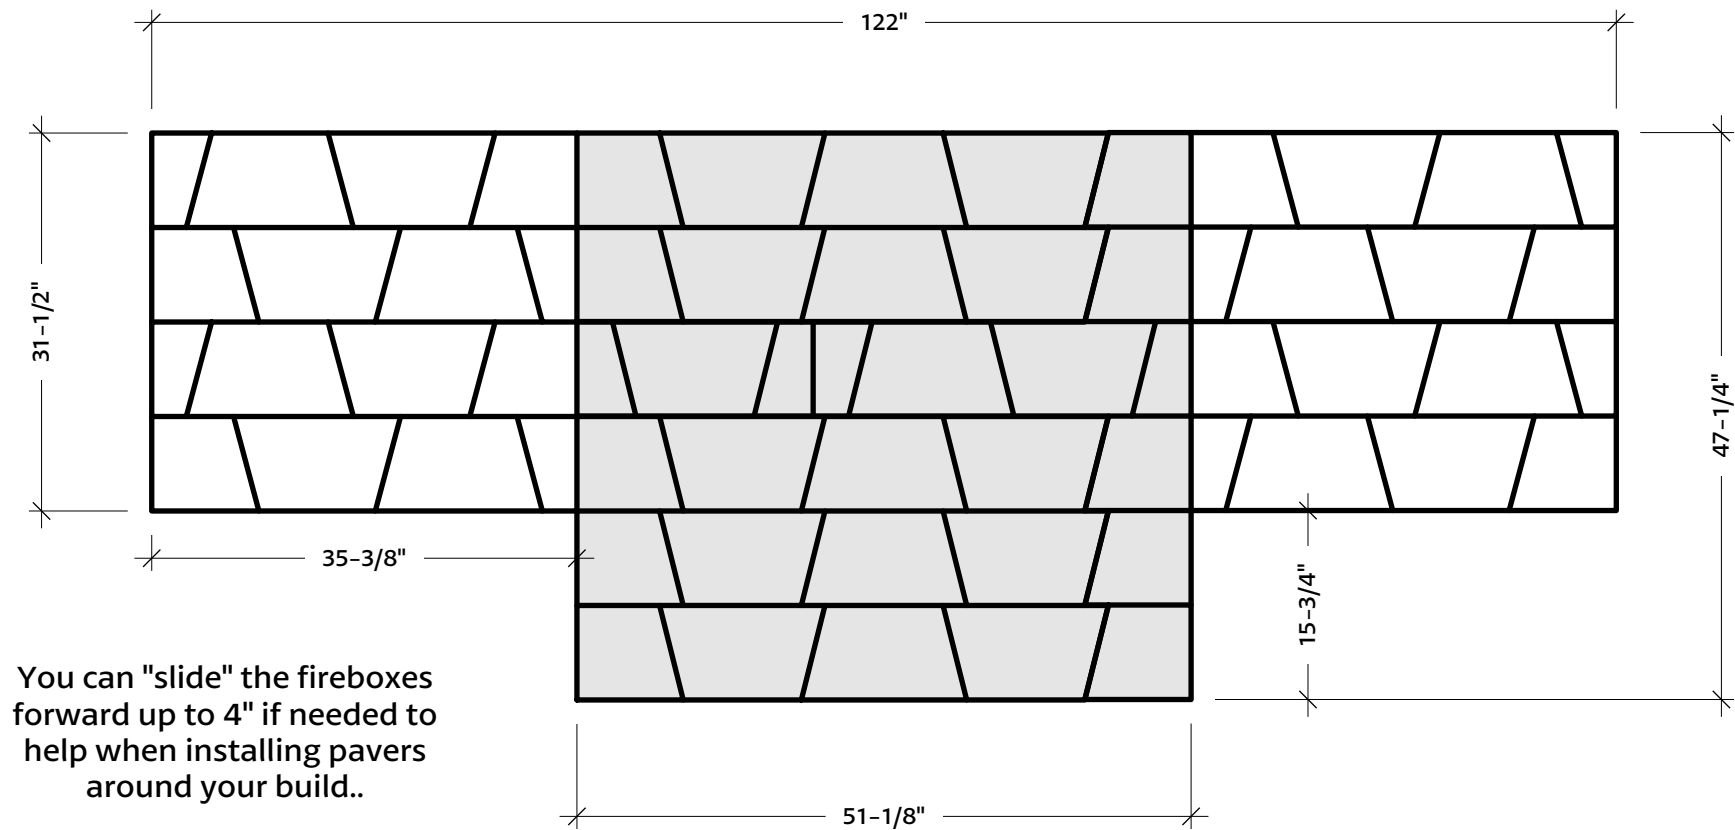


These are theoretical dimensions of a perfect build to help you plan your project.
If you have any questions, please visit:
www.romanstone.com

BUILD WITH ROMAN™

WBO-3632

Wood Boxes

All sizes in this document are approximate.

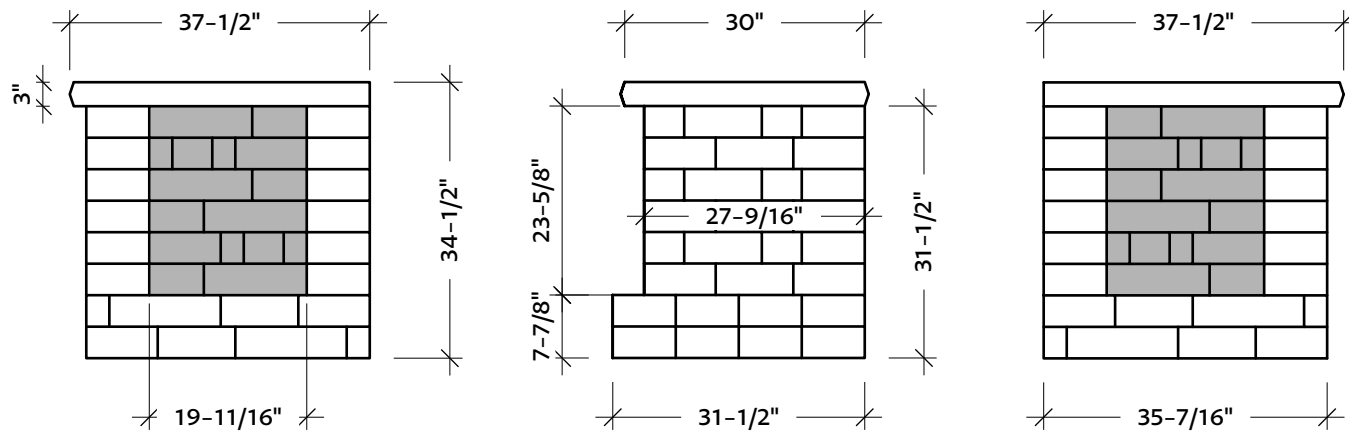




These are theoretical dimensions of a perfect build to help you plan your project.
If you have any questions, please visit:
www.romanstone.com

BUILD WITH ROMAN™

WBR-3244

Tall Batwing Boxes

All sizes in this document are approximate.

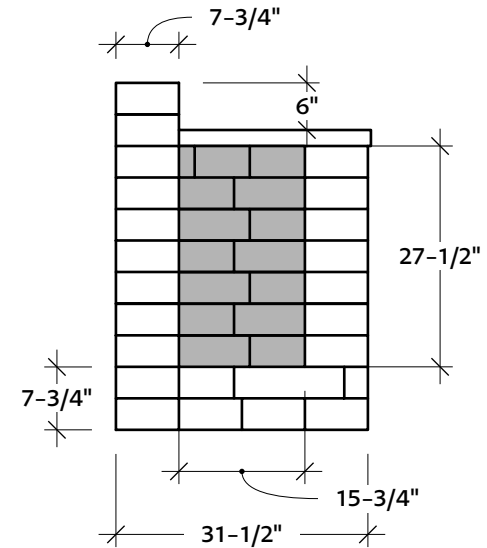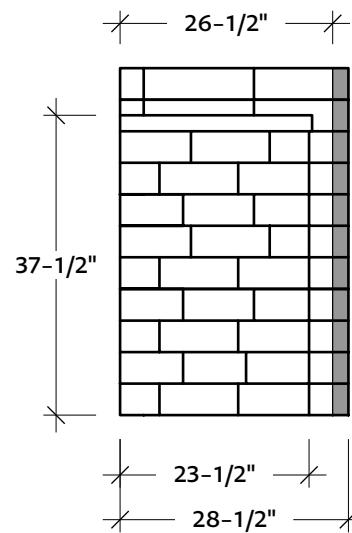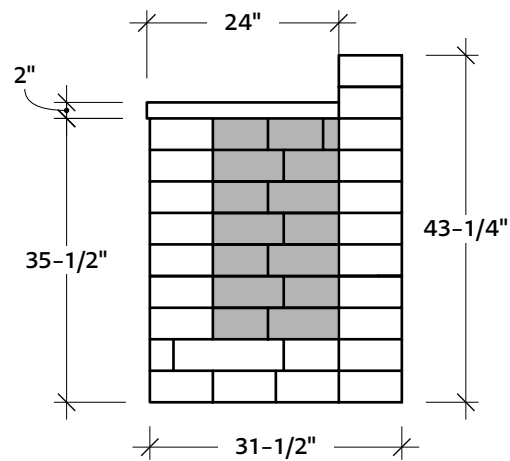

Depth of the wood storage area is 15.75"




Step by step instructions for assembling
FPX-ALL on a prepared surface/base.
If you have any questions, please visit:
www.romanstone.com

BUILD WITH ROMAN™

Fremont & Princeton

Fire Box Dimensions

All sizes in this document are approximate.

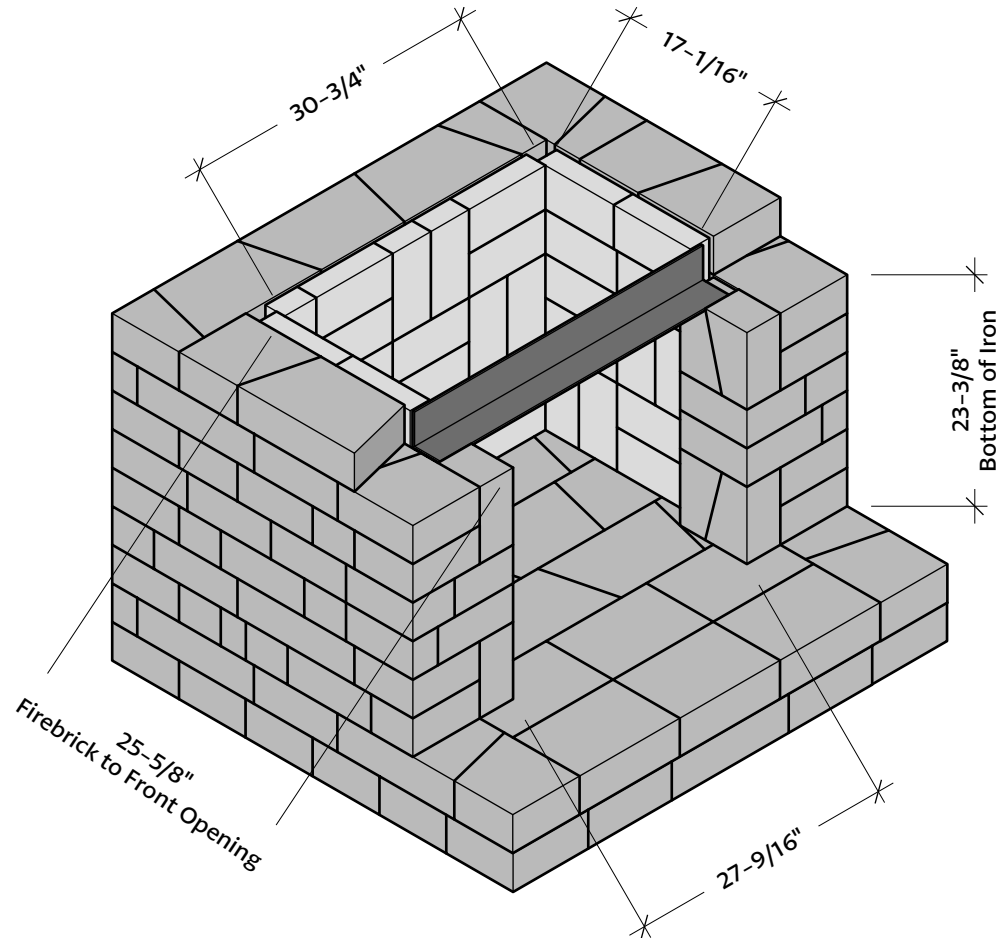


These are theoretical dimensions of a perfect build to help you plan your project.
If you have any questions, please visit:
www.romanstone.com

BUILD WITH ROMAN™

Extension

Base Extension

All sizes in this document are approximate.

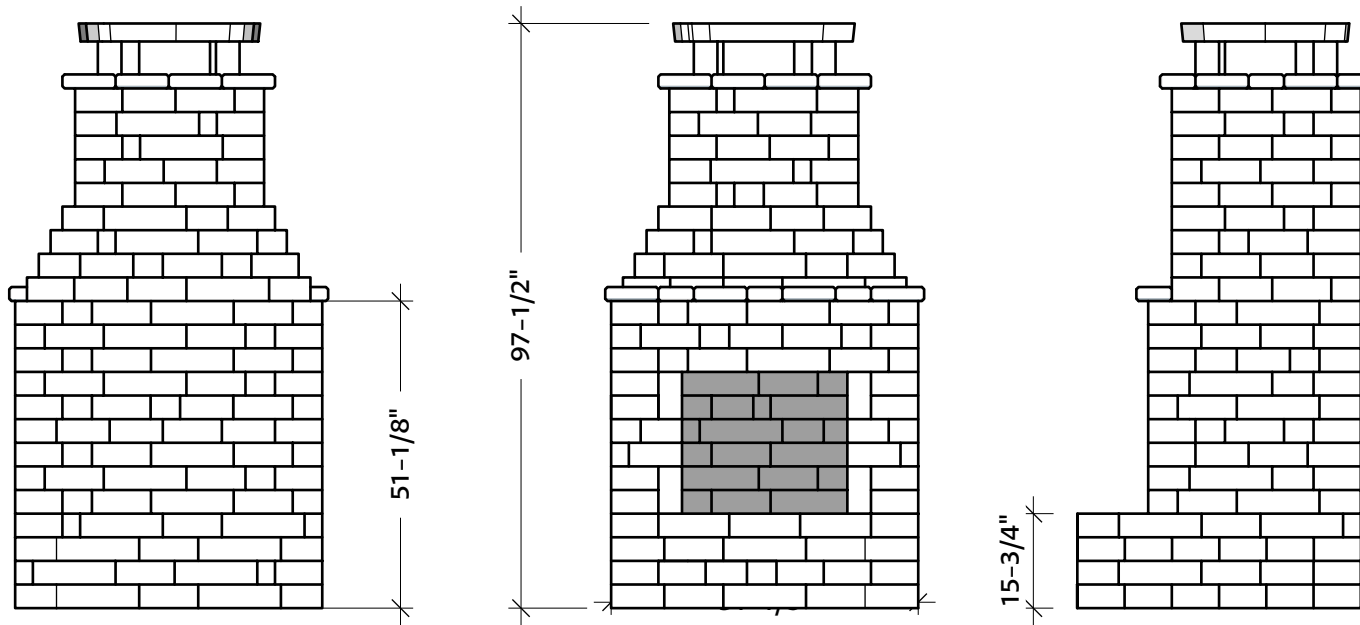


These are theoretical dimensions of a perfect build to help you plan your project.
If you have any questions, please visit:
www.romanstone.com

BUILD WITH ROMAN™

Extension

Chimney Extension

All sizes in this document are approximate.

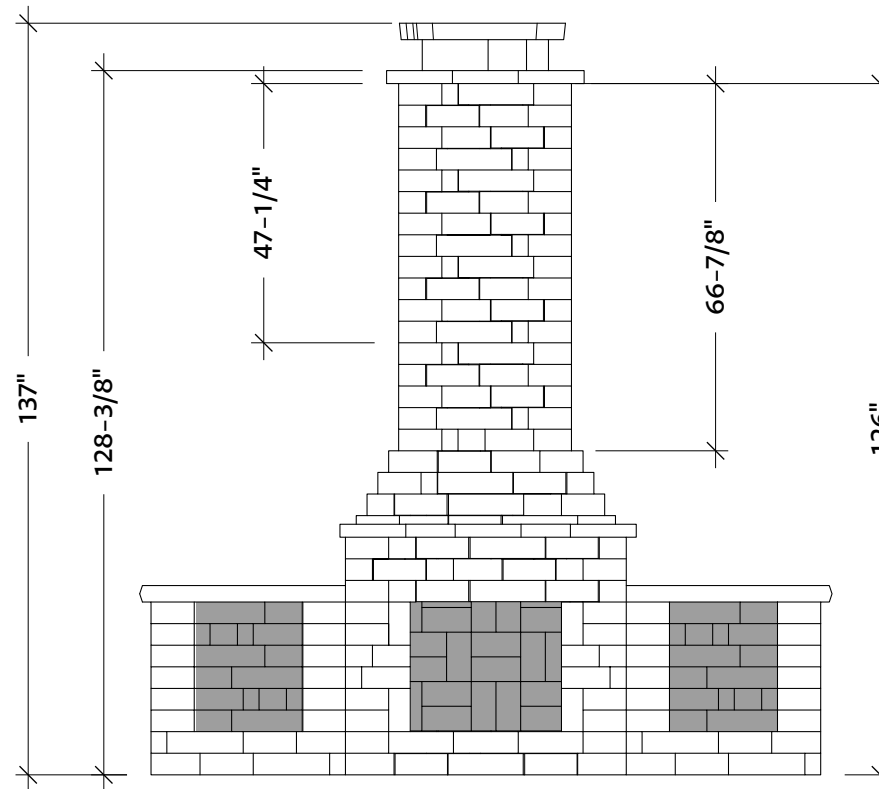

Maximum recommended dimensions

Do not add more than 48" to the height of the original chimney.




These are theoretical dimensions of a perfect build to help you plan your project.
If you have any questions, please visit:
www.romanstone.com

BUILD WITH ROMAN™

FPP-5228

Princeton Fireplace

All sizes in this document are approximate.

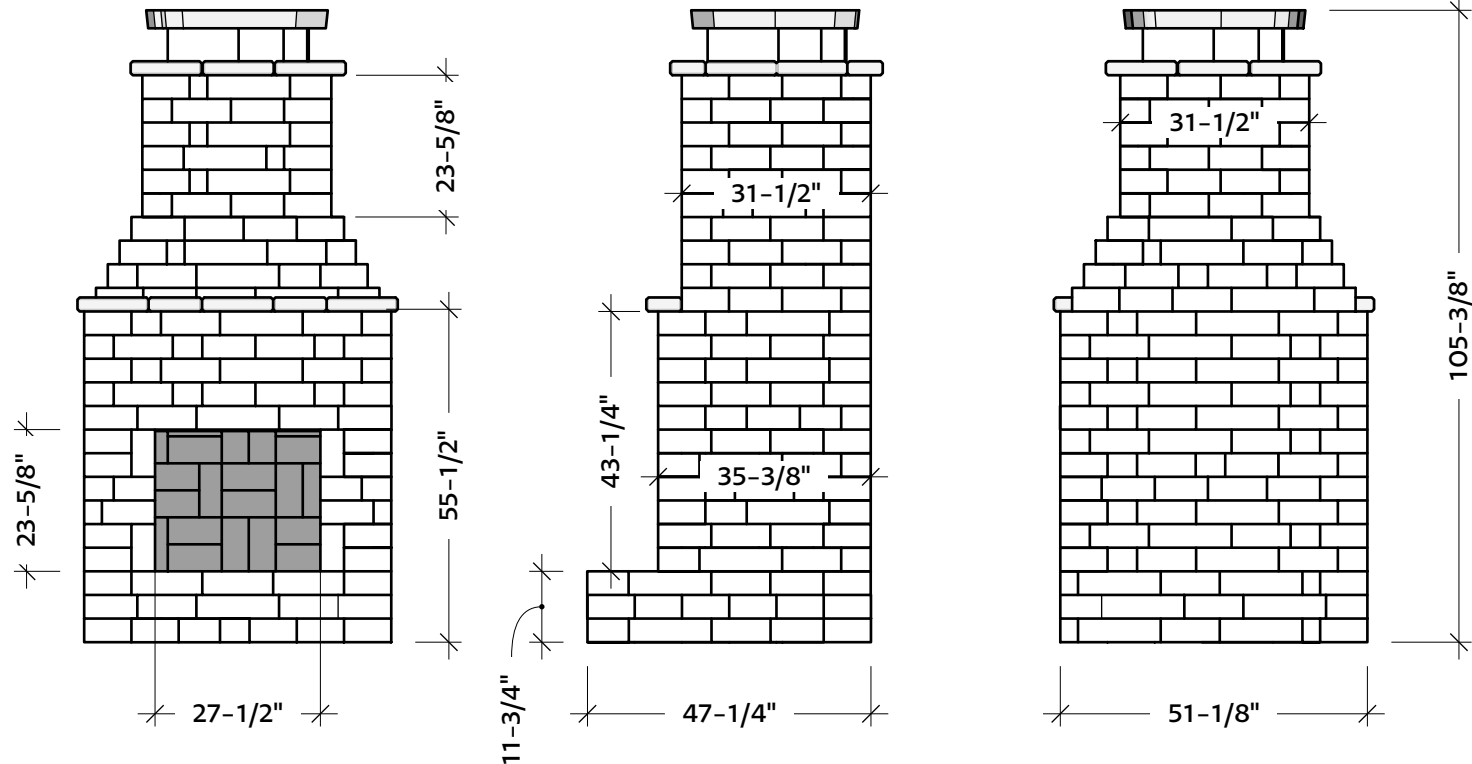


Step by step instructions for assembling
FPX-ALL on a prepared surface/base.
If you have any questions, please visit:
www.romanstone.com

BUILD WITH ROMAN™

SWS-2465

Fireplace Seatwall

All sizes in this document are nominal.

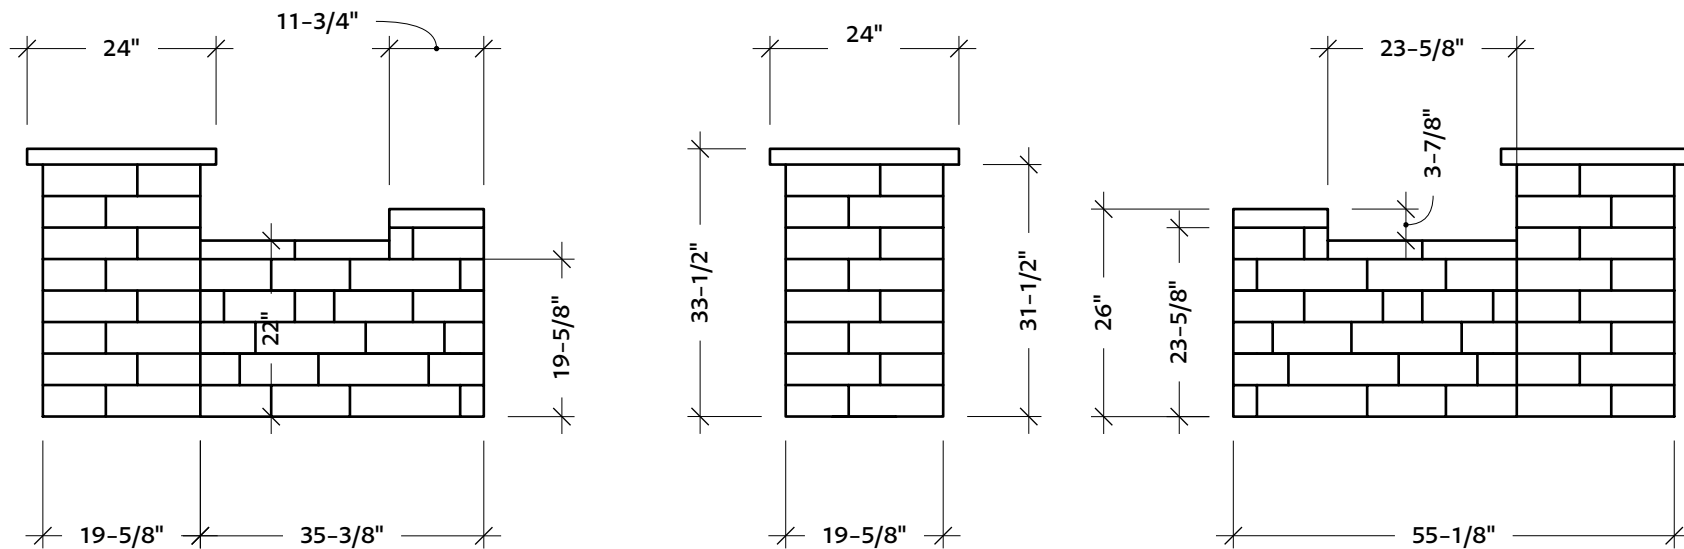

Seat Wall is approximately 8" deep with a 12" deep cap




Step by step instructions for assembling
FPX-ALL on a prepared surface/base.
If you have any questions, please visit:
www.romanstone.com

BUILD WITH ROMAN™

SWS-2456

Fireplace Seatwall with Fremont or Princeton & Classic Boxes

All sizes in this document are approximate.

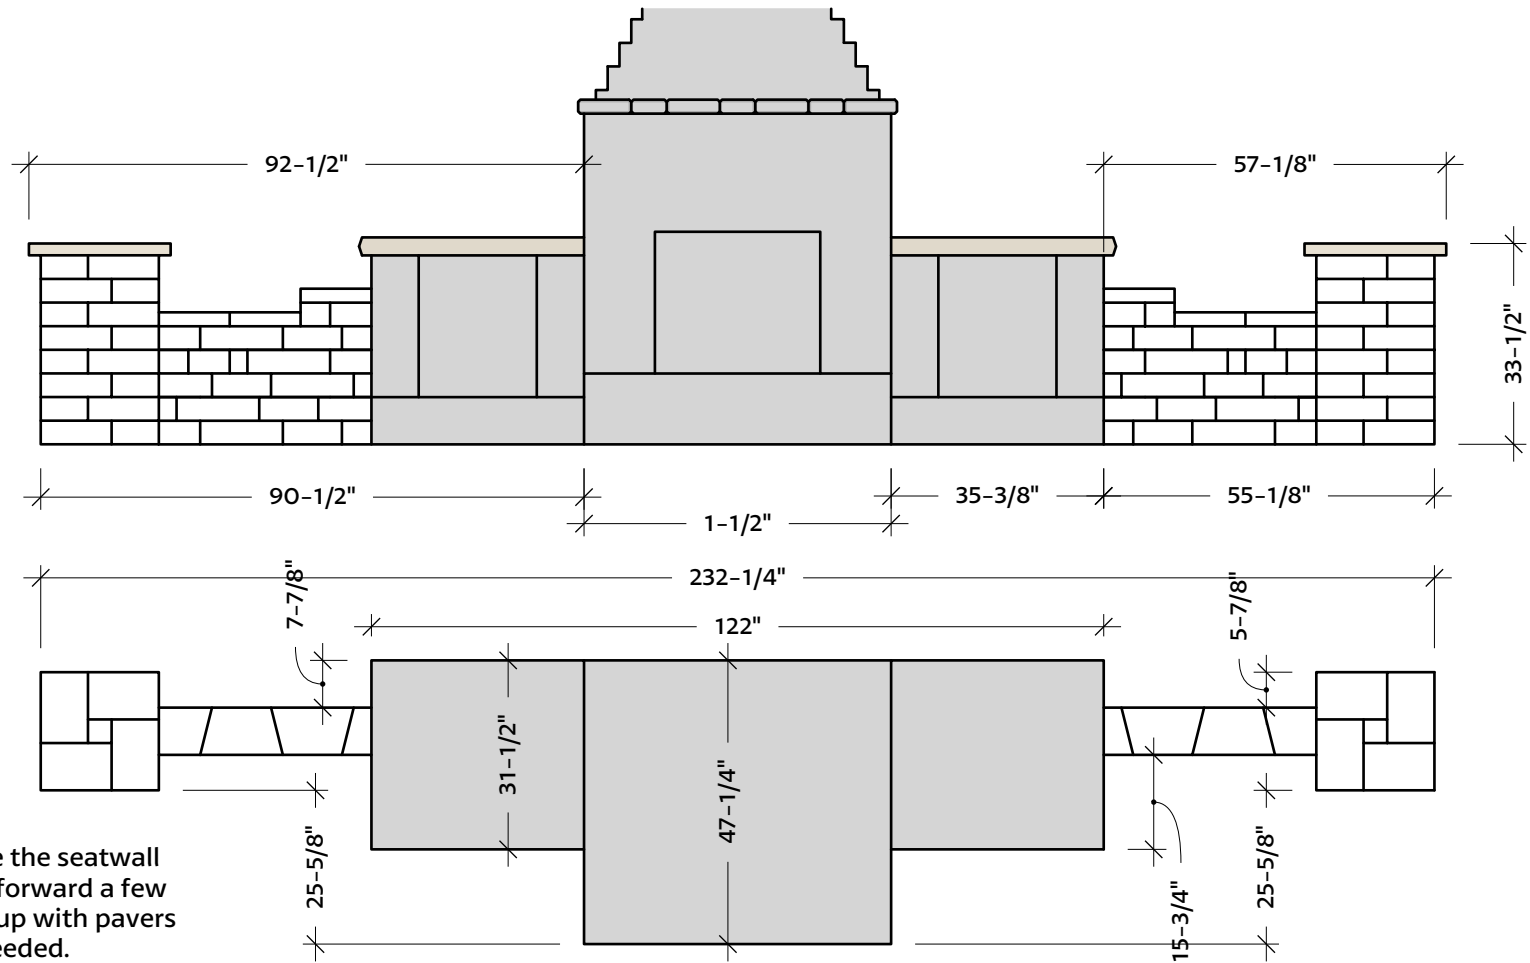

You can slide the seatwall backward or forward a few inches to line up with pavers as needed.




Step by step instructions for assembling
FPX-ALL on a prepared surface/base.
If you have any questions, please visit:
www.romanstone.com

BUILD WITH ROMAN™

SWS-2456

Fireplace Seatwall with Fremont or Princeton & Batwing Boxes

All sizes in this document are approximate.

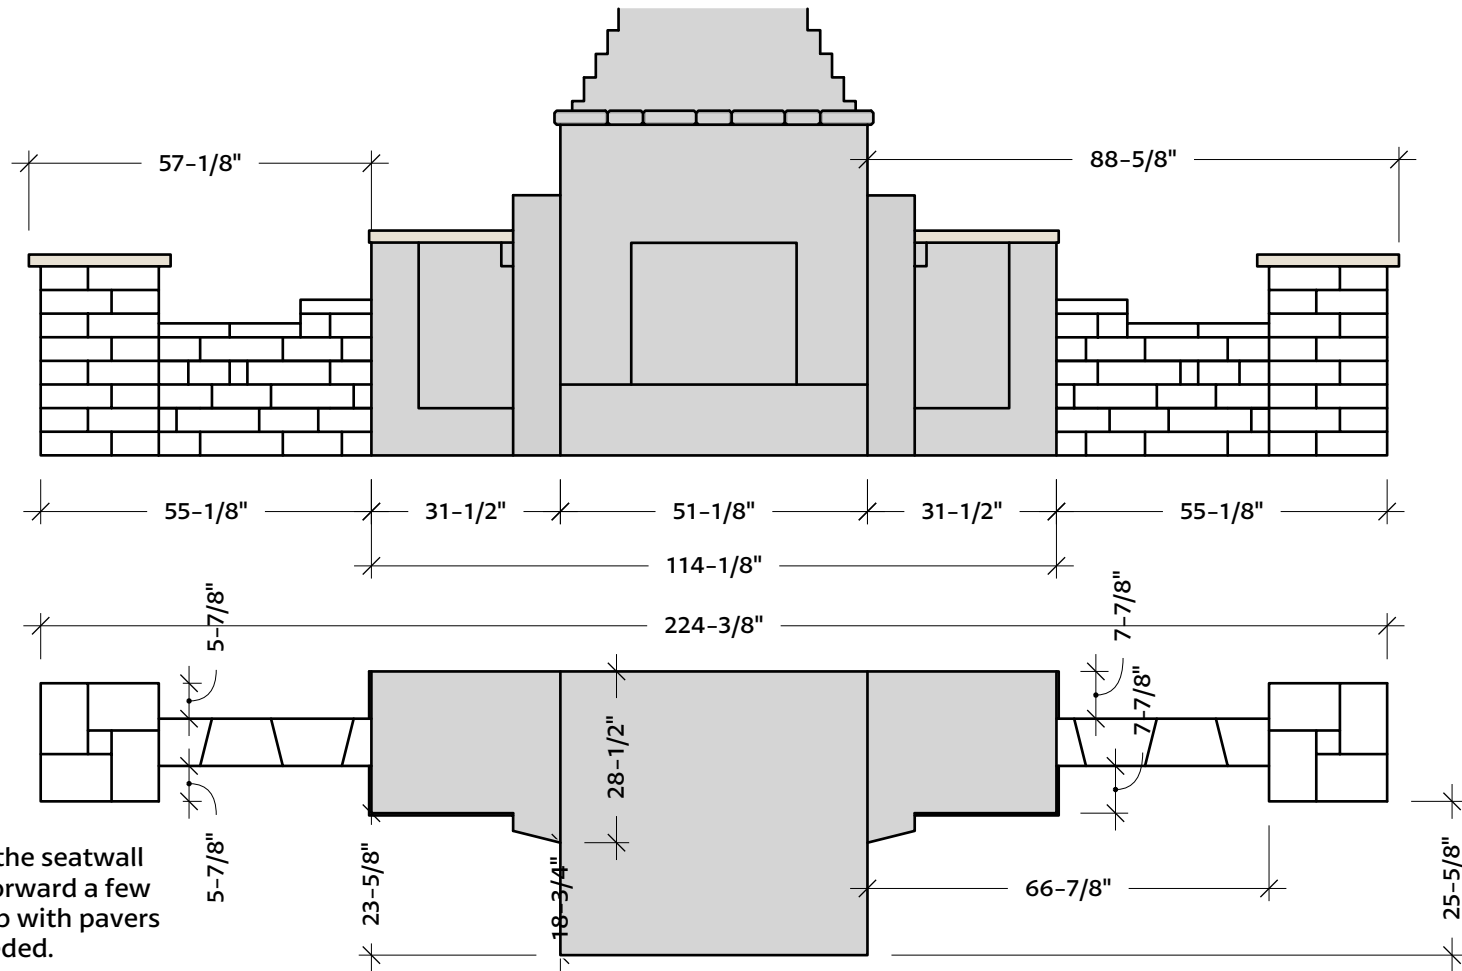

You can slide the seatwall backward or forward a few inches to line up with pavers as needed.




Step by step instructions for assembling
FPX-ALL on a prepared surface/base.
If you have any questions, please visit:
www.romanstone.com

BUILD WITH ROMAN™

SWS-2456

Fireplace Seatwall with Fremont or Princeton with no Boxes

All sizes in this document are approximate.

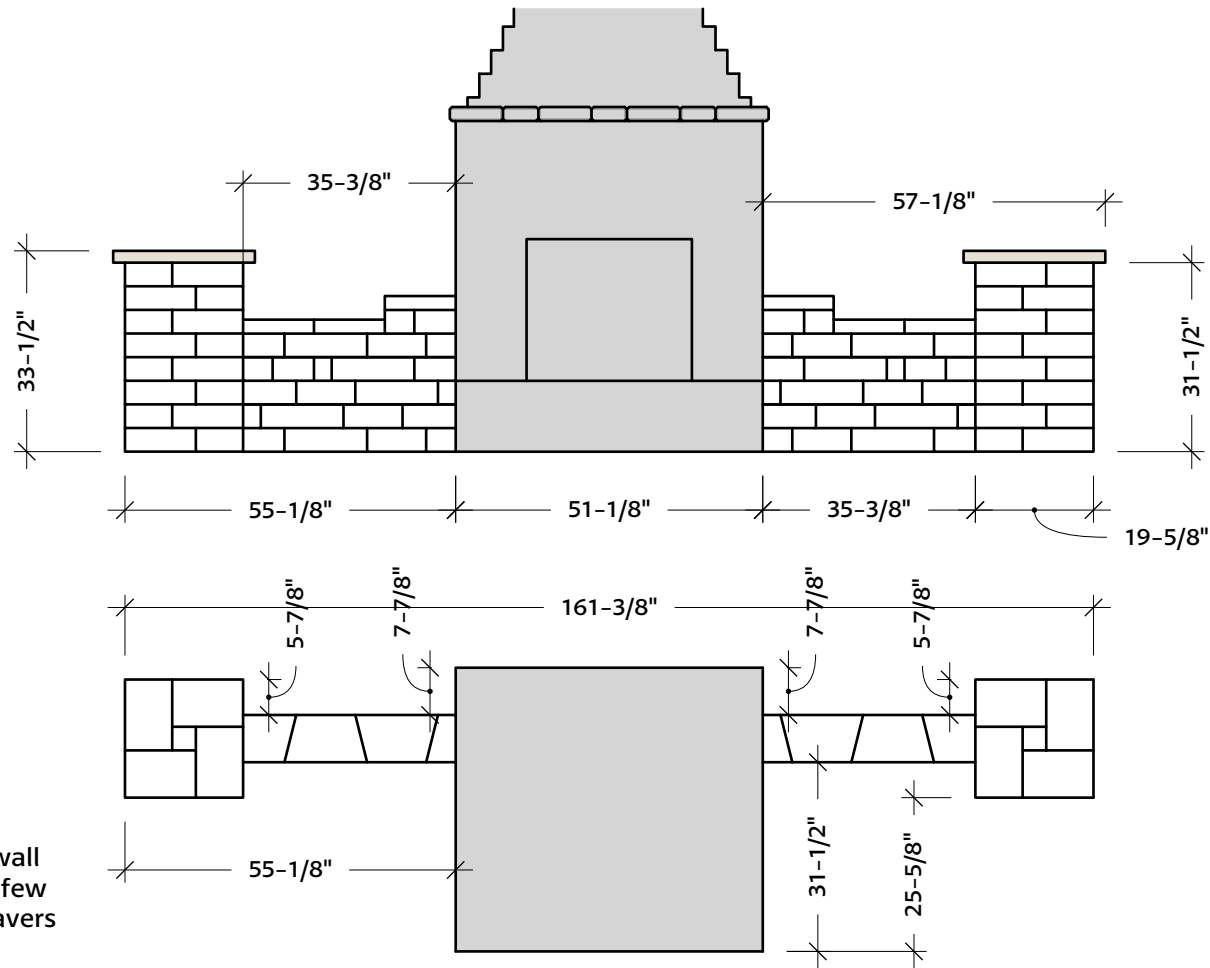

You can slide the seatwall backward or forward a few inches to line up with pavers as needed.




Step by step instructions for assembling
FPX-ALL on a prepared surface/base.
If you have any questions, please visit:
www.romanstone.com

BUILD WITH ROMAN™

FPR-6828

Rockwell Fireplace

All sizes in this document are approximate.

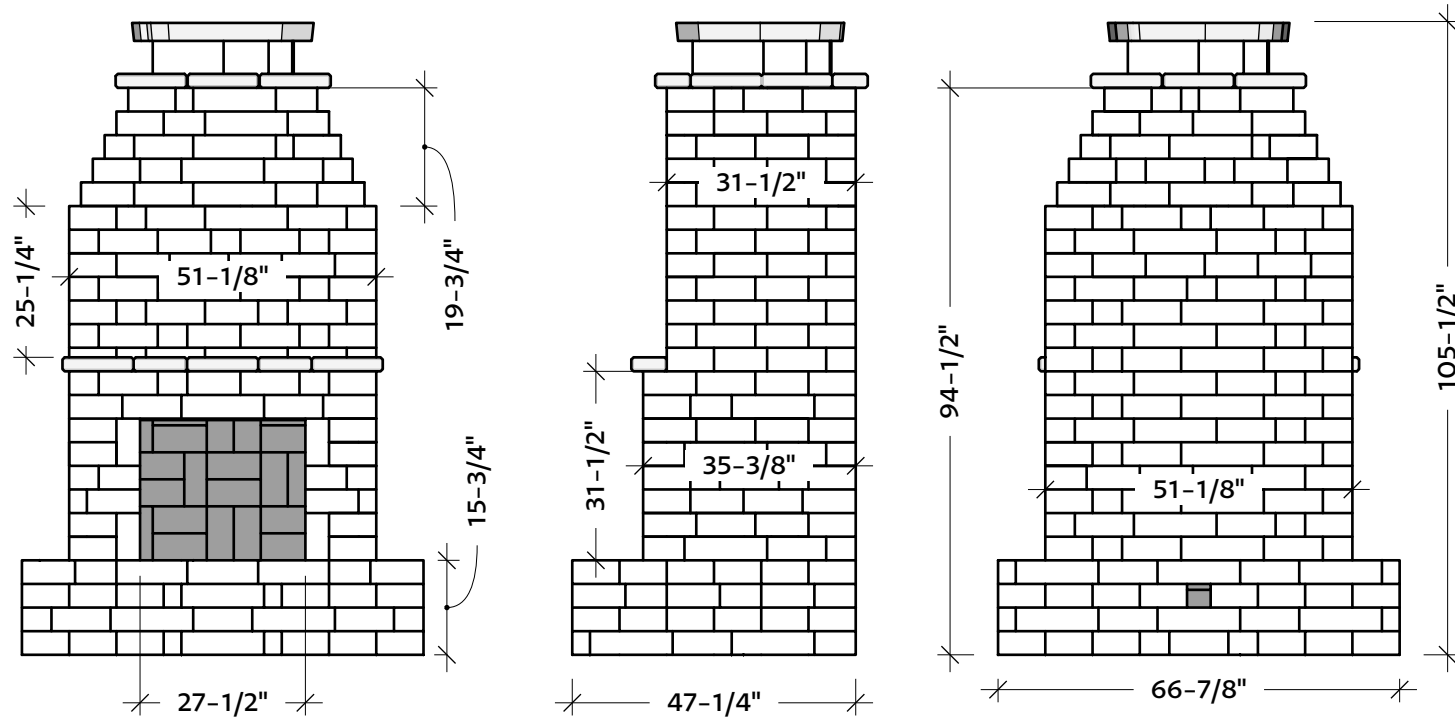


Step by step instructions for assembling
FPX-ALL on a prepared surface/base.
If you have any questions, please visit:
www.romanstone.com

BUILD WITH ROMAN™

Rockwell

Fire Box Dimensions

All sizes in this document are approximate.

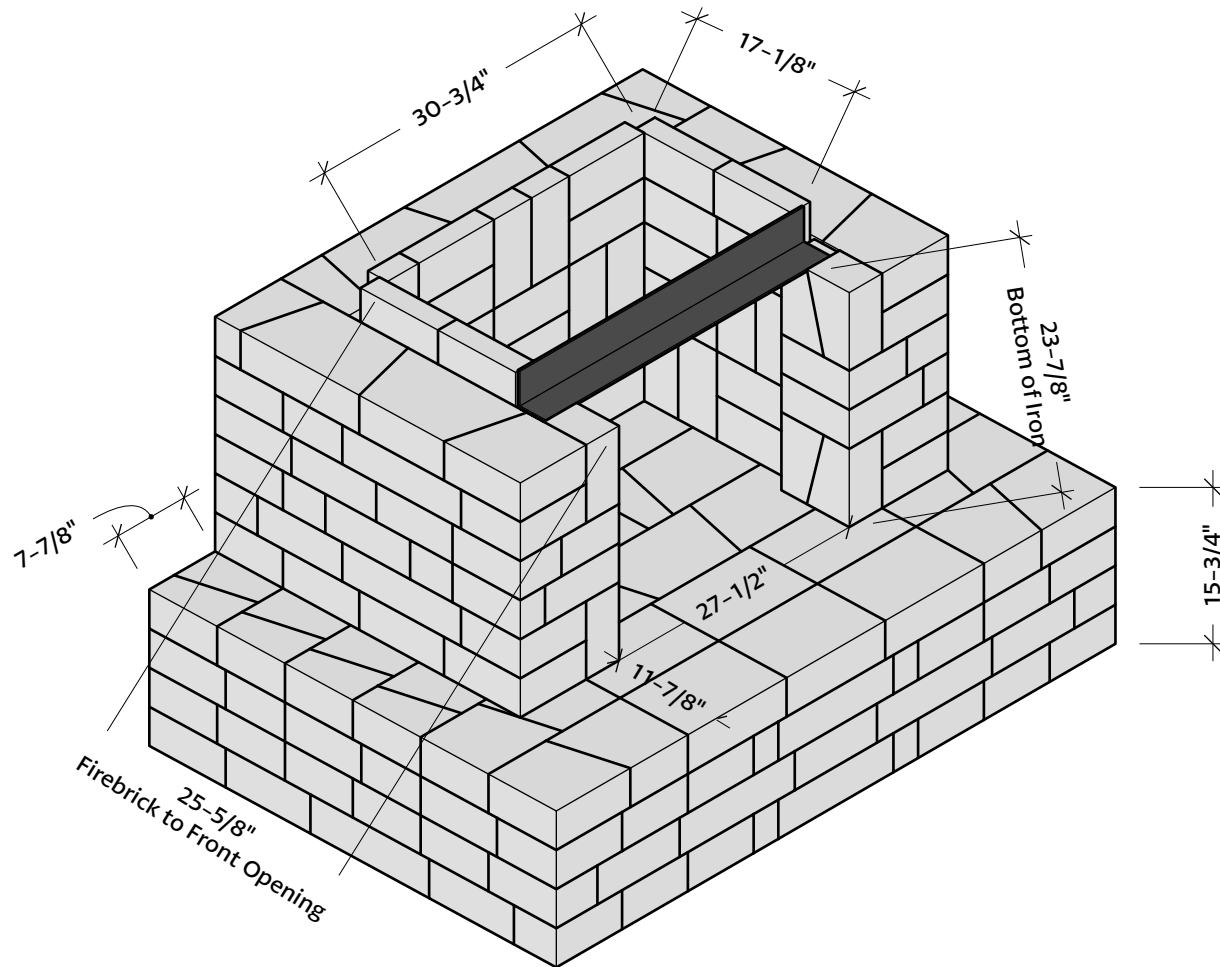




Step by step instructions for assembling
FPX-ALL on a prepared surface/base.
If you have any questions, please visit:
www.romanstone.com

BUILD WITH ROMAN™

WBR-3244

Rockwell Wood Boxes

All sizes in this document are approximate.

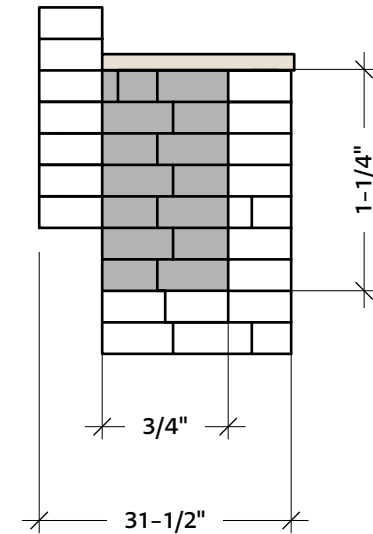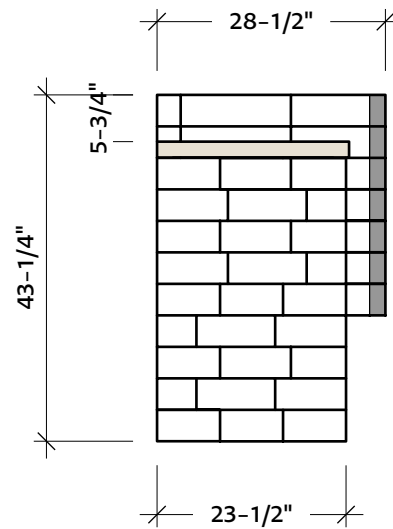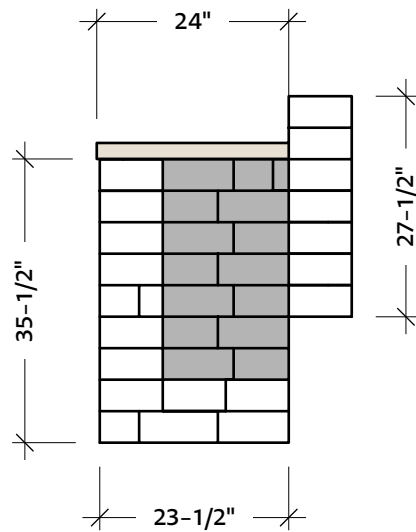


Step by step instructions for assembling
FPX-ALL on a prepared surface/base.
If you have any questions, please visit:
www.romanstone.com

BUILD WITH ROMAN™

SWS-2456

Rockwell Seatwall

All sizes in this document are approximate.

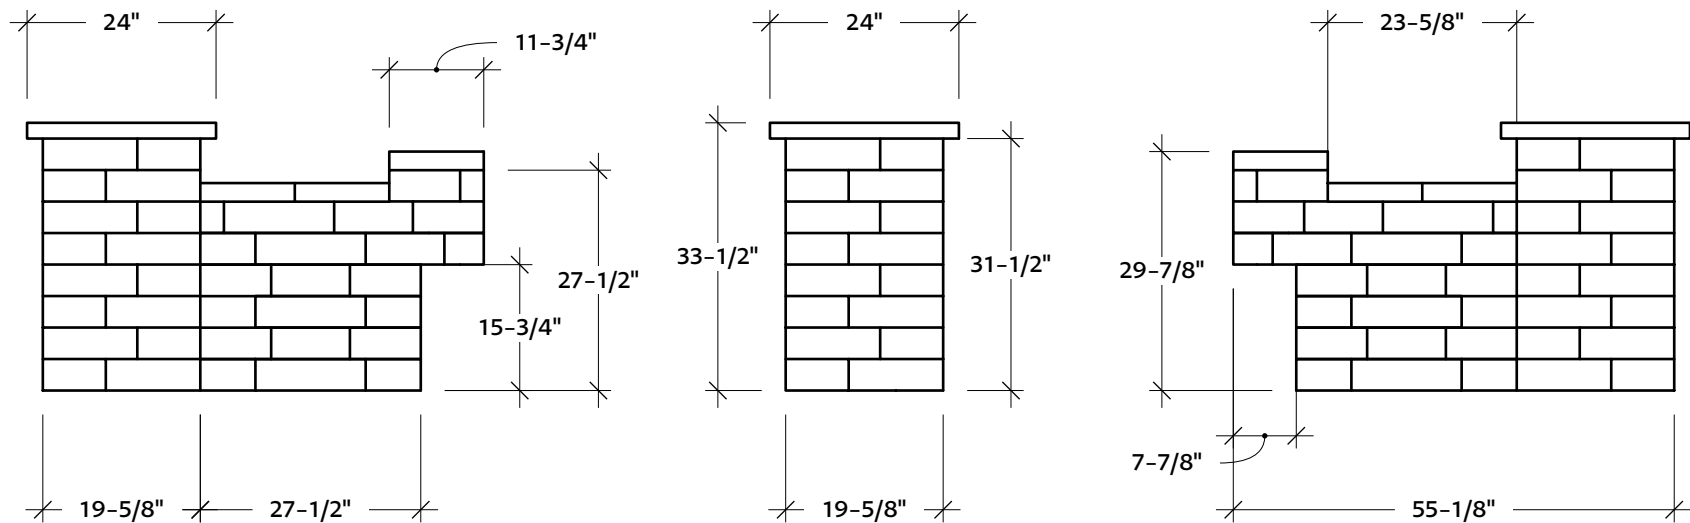

Seat Wall is approximately 8" deep with a 12" deep cap




Step by step instructions for assembling
FPX-ALL on a prepared surface/base.
If you have any questions, please visit:
www.romanstone.com

BUILD WITH ROMAN™

SWS-2456

Fireplace Seatwall with Rockwell with Batwing Boxes

All sizes in this document are approximate.

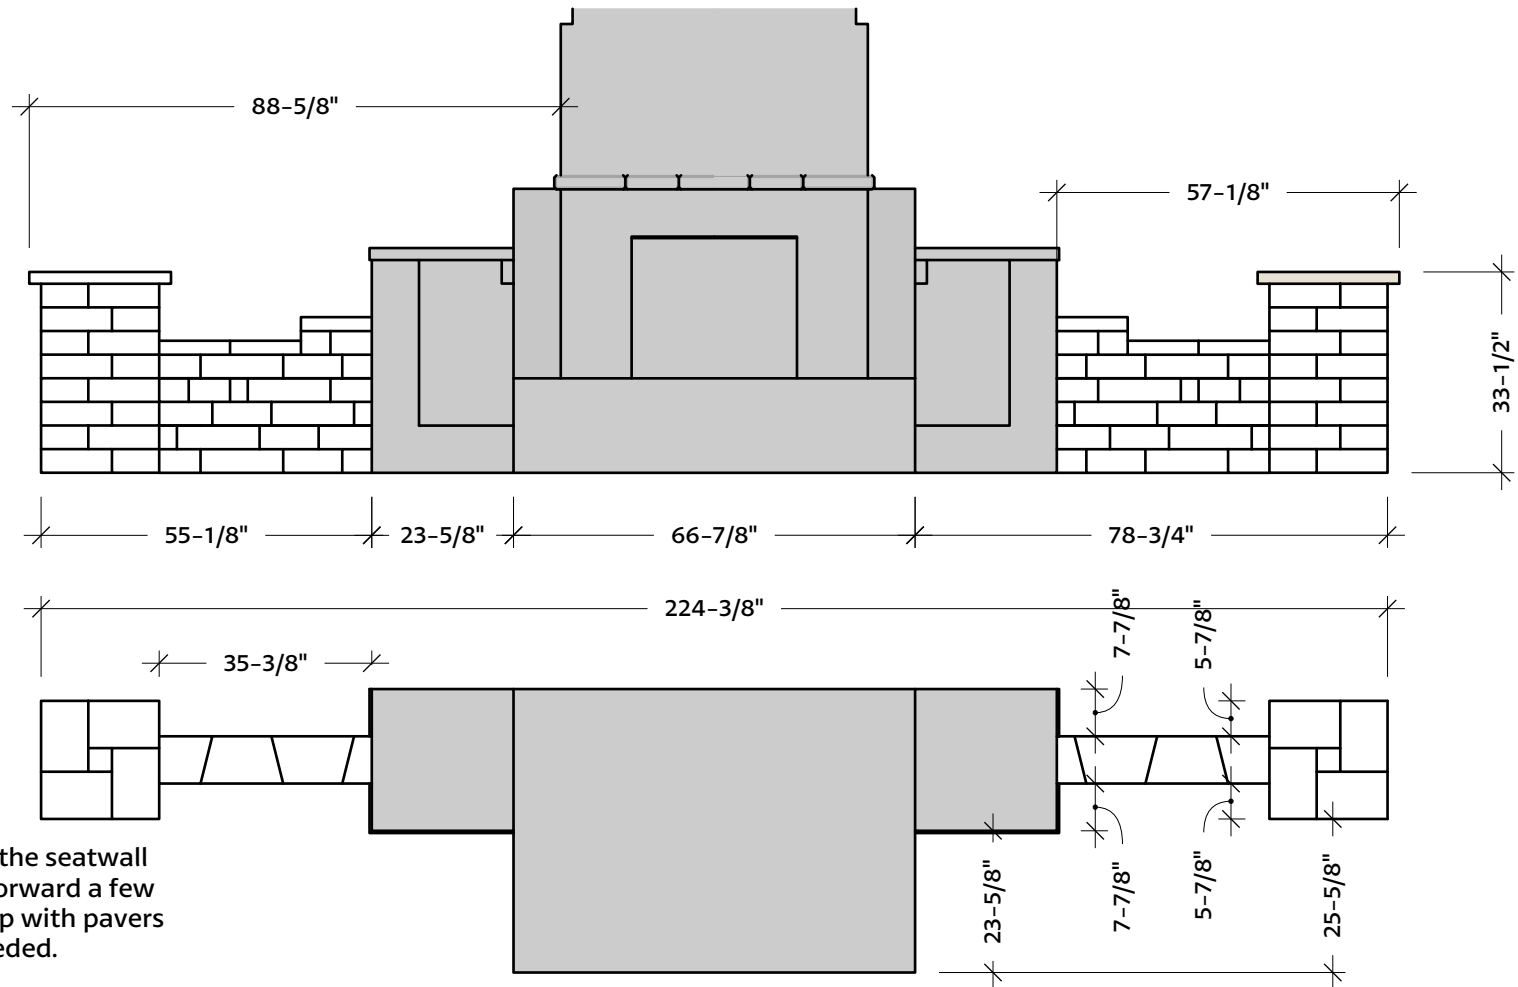

You can slide the seatwall backward or forward a few inches to line up with pavers as needed.



Step by step instructions for assembling
FPX-ALL on a prepared surface/base.
If you have any questions, please visit:
www.romanstone.com

BUILD WITH ROMAN™